

IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

C	onte	nts	
1.	Ove	rview	2
2.	Con	tractor Tools & Materials	2
3.	Flō S	Supplied Parts	2
4.	Pulli	ng Communications Cable	3
5.	Insta	all New Power Supply	3
	5.1	Install New Transformers	3
	5.2	Wire New Transformers	3
	5.3	Prepare i-Controller for Installation	3
	5.4	Prepare Expansion Module A for Installation .	3
	5.5	Prepare Expansion Module B for Installation .	3
6.	Insta	all New Safety Devices & Sensors	4
	6.1	Install Digital Phase Monitor	4
	6.2	Install Refrigerant Pressure Transducers	4
	6.3	Replace Reheat/Reclaim Surface-Mount Prob	e 4
	6.4	Install Float Switch	4
	6.5	Install New CO2 Sensor	5
	6.6	Install Space Temp/RH Combo Sensor	5
7.	Insta	all The i-Controller Components	6
	7.1	Remove Existing Jenesys Controls	6
	7.2	Install New i-Controller and Expansions	6
	7.3	Install Visograph	6
	7.4	Connect the i-Controller to Power	6
	7.5	Connect the Expansion Modules to Power	6
	7.6	Wire Inputs	7
	7.7	Wire Analog Output	8
	7.8	Wire Relay Output	9
	7.9	Connect BACnet Network	9
8.	Valid	date and Power Up the Unit	. 10
	8.1	Check Continuity	. 10
	8.2	Power Up the Unit	. 10
	8.3	Setting The Digital Phase Monitor (DPM)	. 10
9.	Test	Unit Functionality	. 10
	9 1	Set Time and Date	10

9.2	Verify i-Controller Inputs on Visograph	10
9.3	Calibrate Sensors	10
9.4	Verify i-Controller Outputs	10
9.5	Dehumidification Test Mode	11
9.6	Heating Test Mode	11
10.	BMS Connectivity	12
11.	Appendix:	13
11.1	. i-Controller Layout	13
11.2	. Expansion Board Layout	13



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

1. Overview

This document describes the steps required to replace the Jace2 controller with an i-Controller in a 40-70 ton MPU unit.

Below is a brief summary of an i-Controller upgrade.

- Power supply replacement.
- CO2 sensor replacement.
- Pressure transducer installation.
- Reheat/reclaim inlet sensor replacement.
- Space temp/RH sensor replacement.
- Controller replacement.
- Perform operational tests.

2. Contractor Tools & Materials

In addition to a standard toolset, having the items in Table 1 are required during the installation.

ADDITIONAL TOOLS & MATERIALS				
Cordless Drill	Drill Bit Set			
Multi-Meter	Adjustable Wrench			
Wire Strippers	Wire Crimpers			
Temperature Gauge	Psychrometer			
Socket Set – Standard	Cell Phone			
Red Fork Wire Connectors	Fine Point Sharpie Marker			
5/16" Self-Tapping	Sheetmetal Screws			
18AWG Stranded Insulated	l Wire (Red, Black & White)			
Blue, Orange & Yellow Wire Nuts				
Red Insulated Female Spade Connectors				
Micro Control Screwdriver Set (Eye Glass Repair Size)				
Controls Screwdriver				
½" Step Drill Bit for CO2	Sensor Probe Installation			
¼" Refrigerant Tee with Schrader Depressor & 2 Schrader Cores				
4-Conductor Shielded Twisted Wire or Equivalent				
5-Conductor Shielded Twisted Wire or Equivalent				
BacNet Compliant Cable				

Table 1. Additional Tools & Materials

3. Flō Supplied Parts

The parts contained in the Flō supplied parts kit are provided specifically for the Flō unit at this site.

Part Description	Part Number	Qty
i-Controller Unit Controller	PTCS8188101	1
i-Controller Expansion Module	PTCS8187001	2
DIN-Rail	PTCSP91730	3
DIN-Rail End Cap	PTCSV66150	6
i-Controller Visograph	PTCS8189002	1
Visograph/CO2 Sensor Mounting Bracket	PTCSS30921	2
24VAC Isolated Transformer	PTCSP47700	2
Fuse Elec 10A/500V MIG	PTCSP63180	2
4-Wire Duct CO2 Sensor (with Tubing and Duct Probe)	PTCSV57760	1
Pressure Transducer (0-500psi)	PTCSV67380	4
Transducer Whip (Blue)	PTCSV42221	4
Pressure Transducer (0-667psi)	PTCSV67390	4
Transducer Whip (Yellow)	PTCSV42101	4
Temperature/Humidity Combo Sensor **	PTCS2035752	1
Reheat/Reclaim Coil Surface Mount Temp Sensor	PTCS5011125	2
Float Switch Kit	PTCSS25801	1
Digital Phase Monitor	PTCSV26350	1
Upgrade Document	IN-IC1-15	1

Table 2. Flō Supplied Parts List

**NOTE: PTCS2035752 may be substituted for a RH Sensor (PTCS2035751) and a Temp Probe (PTCS5011121).



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

4. Pulling Communications Cable

A BacNet communications cable must be pulled to the unit for communication to the BMS system.

5. Install New Power Supply

CAUTION: Make sure the power to the Flō unit is turned off and internal electrical circuits are NOT

energized.

5.1 Install New Transformers

Using 5/16" screws, mount the 2 transformers in an area that has available space inside the controls cabinet.

Using the sharpie, mark the transformers as #1 and #2. Transformer 1 will be dedicated to powering the i-controller. Transformer 2 will be dedicated to powering all three expansion modules.

Install the Flo provided fuses (Fuse Elec 10A/500V MIG) in each of the new transformers.

NOTE: No other devices will be connected to these transformers.

5.2 Wire New Transformers

Run the new transformers' high voltage wires to Flō high voltage terminals L1 and L2.

NOTE: Ensure the transformer tap correlates to the unit's high voltage.

Leave the new transformers' low voltage wires disconnected. These will be terminated in the next steps.

5.3 Prepare i-Controller for Installation

Attach 10" lengths of Black 18 AWG wire to the following i-Controller green plug connection points: 1, 7, 8, 25, 28 & 61. See Figure 1. for plug orientation.

Attach 10" lengths of Red 18 AWG wire to the following i-Controller green plug connection points: 9, 15, 16, 29 & 71. See Figure 1. for plug orientation.



Figure 1. Green Connector Reference

Attach Red 18 AWG jumper wires between the following points on the i-Controller green plug connection points: 71 to 80, 80 to 86, and 86 to 90.

Attach a new Black 18 AWG wire between the Flō unit's CSTB1 24 VAC- (grounded side) and the Black 18 AWG wire coming from point 61 on the i-Controller.

Attach a new Red 18 AWG wire between the Flō unit's CSTB1 24 VAC+ (hot side) and the Red 18 AWG wire coming from point 71 on the i-Controller.

5.4 Prepare Expansion Module A for Installation

Attach 10" length of Black 18 AWG wire to the following Expansion green plug connection points: 1 & 15**.

**NOTE: Only pigtail 15 if the unit has a CO2 or outdoor humidity sensor.

Attach a 10" length of Red 18 AWG wire to the following Expansion green plug connection point: 9.

5.5 Prepare Expansion Module B for Installation

Attach 10" lengths of Black 18 AWG wire to the following Expansion green plug connection points: 1, 15 & 28*.

*NOTE: Point 28 only gets a wire if either 2nd space temp or 2nd stage reheat/reclaim inlet probe.

Attach a 10" length of Red 18 AWG wire to the following Expansion green plug connection point: 9 & 16.



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

6. Install New Safety Devices & Sensors 6.1 Install Digital Phase Monitor

Number the wires on the old phase monitor (you will be landing these wires in the same points on the new digital phase monitor). Once numbered, remove the wires from the old phase monitor, then remove the old phase monitor from the unit.

Mount the new digital phase monitor (DPM) using two screws in the same position that the old phase monitor was located. You may need to either make space or find a nearby location to fit the DPM in.

Once the new DPM is mounted, connect the existing numbered wires to match numbered points on the new DPM using female spade connectors.

Pull a 2-conductor cable from the DPM to the future i-Controller location in the electrical cabinet.

6.2 Install Refrigerant Pressure Transducers

Remove existing suction transducers from circuits 1&2. Discard this transducers and cables.

Install the 0-500 PSI Suction transducers on the suction lines of circuits 1,2,3&4. Install the 0-667 PSI Discharge transducers on the liquid lines of circuits 1,2,3&4. If there are spare service ports on the unit, install the transducers on a spare service port. If spare service ports are not available, use a refrigerant tee.

Using the provided transducer whips, plug the blue whips into the new suction transducers and the yellow whips into the new discharge transducers. Run the whips back to the future i-Controller location in the electrical cabinet.

6.3 Replace Reheat/Reclaim Surface-Mount Probe

If there is a temperature probe currently on the Reheat/Reclaim inlet, remove and discard probe and cable. Secure the new temperature probe on the inlet piping for the Reheat/Reclaim service of the unit. If there are 2 stages for Reheat/Reclaim both probes will be used. Run the temp probe sensor wires back to the future i-Controller location in the electrical cabinet.

6.4 Install Float Switch

Connect the float switch to the provided bracket using the provided washer and nut.

Mount the provided bracket so that the base of the bracket is roughly 2 inches from the drain pan base and located at the front left corner of the drain pan, on the supply fan wall (see figure 2 for positioning requirements)



Figure 2.Float Switch Mounting Position

Pull a 2-conductor cable to the electrical cabinet.

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

6.5 Install New CO2 Sensor

Locate and unfasten the old CO2 sensor. It is located on a column in the store or in the return section of the Flō unit.

Pull a new 4-conductor cable to the return section of the Flō unit. Fasten the new bracket and new sensor to the unit above the outdoor air damper opening on the right-hand side (see figure 3, upper arrow).

Locate the dip switches inside of the new CO2 sensor and change dip switch 1 from 10 VDC to 5 VDC.

Drill a 1/2" hole in the return damper housing and mount the probe (see figure 3, lower arrow).



Figure 3. CO2 sensor location inside the unit

Wire the new CO2 based on the following (see Figure 4.):

- +24VAC Red wire
- -24VAC Black wire
- COM Green wire
- CO2 SIGNAL White wire

NOTE: Do not wire the CO2 sensor to the i-Controller or Expansion Module at this time.

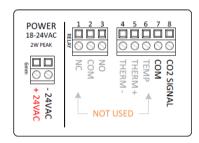


Figure 4. CO2 Sensor Wiring

6.6 Install Space Temp/RH Combo Sensor

Replace the current space temp/RH sensors in the space with a new combo sensor (203-5752) provided with this kit.

NOTE: If necessary, pull a new 5-wire conductor cable.

Mount the base of the new space temp/RH combo sensor in the place where the old sensor was located.

Wire the new combo sensor based on the following (see figure 5.):

- +12VDC Red wire
- 0V (on Humidity side) Black wire
- RH OUT (+0-5V) White wire
- OV (on Temp side) Green wire
- SIGNAL Blue wire

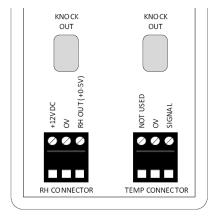


Figure 5.1. 203-5752 Space Temp/Humidity Terminal Connections

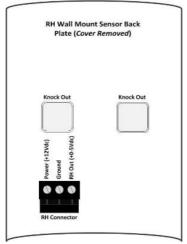


Figure 5.2. 203-5751 Humidity Terminal Connections



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion



Figure 5.3. 501-1125 Temp Sensor Mounting Position In RH

IMPORTANT: If you have a 203-5752, move the jumper on JP3 from 10V to 5V on the combo sensor.

NOTE: Do not wire the combo sensor to the i-Controller or Expansion Module at this time.

7. Install The i-Controller Components

7.1 Remove Existing Jenesys Controls

Locate the Jenesys controls. Remove all Jenesys controls from the din rail.

NOTE: If the Jenesys inputs and outputs are not labeled, label these wires before proceeding.

7.2 Install New i-Controller and Expansions

Mount the i-Controller and expansion modules on DIN rails.

Double-check that the Expansion Modules are addressed as 1 &2. Verify the addressing and adjust as necessary on the dip switches (location called out in *Figure 6*. This figure is an example of expansion A setup).

Expansion A - 1 up, 2 down, 3 down, 4 down Expansion B - 1 down, 2 up, 3 down, 4 down

NOTE: The actual switch may be white but for illustrative purposes, the switch is black in the *Figure 6* below.

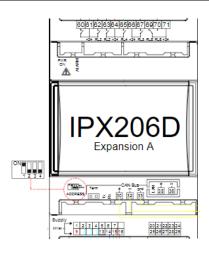


Figure 6. Flō i-Controller Expansion Addressing

Wire the 2 expansion modules to the main i-Controller via the **CAN Bus** port in a daisy change based on the following:

- Expansion Module (B) 30 (+) → Expansion Module (A) 30 (+)
 → i-Controller 100 (+)
- Expansion Module (B) 32 (-) → Expansion Module (A) 32 (-) →
 i-Controller 101 (-)
- Expansion Module (B) 33 (gnd) → Expansion Module (A) 33 (gnd) → i-Controller 102 (gnd)

7.3 Install Visograph

Mount the Visograph and connect it to the i-Controller port.

Wire the Visograph based on the following:

- White wire VNR (Visograph) → 103 (i-Controller)
- Red wire + (Visograph) → 104 (i-Controller)
- Black wire (Visograph) → 105 (i-Controller)

7.4 Connect the i-Controller to Power

Connect transformer 1's low voltage common to black 10" wire from i-Controller pin 1.

Connect transformer 1's low voltage 24V to red 10" wire from i-Controller pin 9.

7.5 Connect the Expansion Modules to Power

Connect transformer 2's low voltage common to black 10" wire from all three expansion modules pin 1.

Connect transformer 2's low voltage 24V to red 10" wire from all three expansion modules pin 9.



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40–70 Ton) Conversion

7.6 Wire Inputs

Wire analog/digital inputs based on table 3.

Existing Points	i-Controller	i-Controller Pin #
	24 VAC Transformer Power 1 -	1*
	24 VAC Transformer Power 1 +	9*
	Space Temperature 1 SG	2
NEW	Space Temperature 1 0V	7*
	Space Humidity 1 SG	3
	Space Humidity 1 0V	8*
	Space Humidity 1 Power	16*
Reuse	Supply Temperature SG	4
Jenesys Sensor	Supply Temperature 0V	7*
NIENA	Reheat/Reclaim Inlet Probe 1 SG	5
NEW	Reheat/Reclaim Inlet Probe 1 0V	7*
	Outside Air Temperature SG	6
Reuse	Outside Air Temperature 0V	7*
Jenesys Sensor	Return Temperature SG	10
	Return Temperature 0V	7*
	Suction Press Comp 1 SG WHT	11
	Suction Press Comp 1 0V BLK	8*
	Suction Press Comp 1 Pwr RED	15*
	Discharge Press Comp 1 SG WHT	12
	Discharge Press Comp 1 0V BLK	8*
	Discharge Press Comp 1 Pwr RED	15*
NEW	Suction Press Comp 2 SG WHT	13
	Suction Press Comp 2 0V BLK	8*
	Suction Press Comp 2 Pwr RED	15*
	Discharge Press Comp 2 SG WHT	14
	Discharge Press Comp 2 0V BLK	8*
	Discharge Press Comp 2 Pwr RED	15*

Existing Points	i-Controller	i-Controller Pin #
	Smoke Detector/ Emergency Shutdown SG	40
	Smoke Detector/ Emergency Shutdown 0V	61*
	Airflow Switch SG	41
See Wiring	Airflow Switch 0V	61*
Diagram	Clogged Filter SG	42
	Clogged Filter 0V	61*
	Load Shed SG (if equipped)	45
	Load Shed 0V (if equipped)	61*
	Drain Pan Float Switch SG	43
NFW	Drain Pan Float Switch 0V	61*
INEVV	Phase Monitor SG	44
	Phase Monitor 0V	61*

Existing Points	Expansion Module A	Expansion A Pin #
	24 VAC Transformer Power 2 -	1*
	24 VAC Transformer Power 2 +	9*
	CO2 SG (if equipped)	2
NEW	CO2 0V (if equipped)	15*
	CO2 +24 (if equipped)	CSTB1
		Red**
	CO2 -24 (if equipped)	CSTB1 Black**
	Outdoor Humidity SG	3
	(if equipped)	3
See Wiring	Outdoor Humidity 0V	15*
Diagram	(if equipped)	15
	Outdoor Humidity Power	7
	(if equipped)	



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

Existing Points	Expansion Module B	Expansion B Pin #
	24 VAC Transformer Power 2 -	1*
	24 VAC Transformer Power 2 +	9*
	Suction Press Comp 3 SG WHT	2
	Suction Press Comp 3 0V BLK	15*
	Suction Press Comp 3 Pwr RED	16*
	Discharge Press Comp 3 SG WHT	3
	Discharge Press Comp 3 0V BLK	15*
	Discharge Press Comp 3 Pwr RED	16*
	Suction Press Comp 4 SG WHT	4
	Suction Press Comp 4 0V BLK	15*
NEW	Suction Press Comp 4 Pwr RED	16*
	Discharge Press Comp 4 SG WHT	5
	Discharge Press Comp 4 0V BLK	15*
	Discharge Press Comp 4 Pwr RED	16*
	Space Temperature 2 SG	24
	Space Temperature 2 0V	28*
	Space Humidity 2 SG	6
	Space Humidity 2 0V	15*
	Space Humidity 2 Power	7
	Reheat/Reclaim Inlet Probe 2 SG	29
	Reheat/Reclaim Inlet Probe 2 0V	28*

^{*}This indicates that you will be attaching to a 10" wire, not a pin.

Table 3. Input Conversion Table

7.7 Wire Analog Output

Wire analog outputs based on table 4.

Existing Points	i-Controller	i-Controller Pin #
	Outside Air Damper SG	21
	Outside Air Damper 0V	25*
	Return Air Damper SG	22
	Return Air Damper 0V	25*
	Bypass Air Damper SG	23
See Wiring	Bypass Air Damper 0V	25*
Diagram in Unit	VFD SG	24
Oc	VFD 0V	25*
	Digital Compressor 1 SG	26
	Digital Compressor 1 0V	25*
	Modulated Reheat SG	27
	Modulated Reheat 0V	25*
New	CSTB -24VAC Black	28*
New	CSTB +24VAC Red	29*

Existing Points	Expansion Module B	Expansion B Pin #
See Wiring	Digital Compressor 2 SG	21
Diagram in Unit	Digital Compressor 2 0V	20

^{*}This indicates that you will be attaching to a 10" wire, not a pin. If multiple CSTB's, use the CSTB that powers the actuators.

Table 4. Analog Output Conversion Table

^{**}This indicates that you will be attaching to the CSTB1.



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40–70 Ton) Conversion

7.8 Wire Relay Output

Wire relay outputs based on table 5.

Existing Points	i-Controller	i-Controller Pin #
	Supply Fan 1 (NO)	70
	Heat Stage 1/Modulating Heat Enable (NO)	72
	Heat Stage 2 (NO)	73*
See Wiring	Heat Stage 3 (NO)	76*
Diagram in Unit	Heat Stage 4 (NO)	77*
iii Oilic	Reheat/Heat Reclaim 1 (NO)	84
	Reheat/Heat Reclaim 2 (NO)	85*
	CSTB1 +24VAC	71, 80, 86** , 90

^{*}if equipped

**WARNING: For units equipped with refrigerant reclaim, do not wire +24VAC to point 86. The dry common from the refrigeration rack reclaim control is connected to point 86.

Existing Points	Expansion Module A	Expansion A Pin #
6 40.	ERV Wheel (if applicable)	60
See Wiring Diagram in Unit	Power Exhaust (if applicable)	62
iii oiiit	CSTB1 +24VAC (if applicable with ERV Wheel)	61
Existing Points	Expansion Module B	Expansion B Pin #
See Wiring	Supply Fan 2 (NO) (if Applicable)	60*
Diagram	Compressor 3 (NO)	62
in Unit	Compressor 4 (NO)	63
	CSTB1 +24VAC	61 & 64

^{*}if equipped with 2 Supply fans

Table 5. Digital Output Conversion Table

7.9 Connect BACnet Network

Wire BACnet based on the following:

- Black wire RS485 Master → 94 (i-Controller)
- White wire RS485 Master + → 95 (i-Controller)
- Shield wire RS485 Master GND → 96 (i-Controller)



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

8. Validate and Power Up the Unit

8.1 Check Continuity

Once all connections are complete, using a multimeter, verify points 1, 7, and 8 are not reading to earth ground.

Now check for shorts within the analog sensor connections by measuring between points 7 and 8.

If you have any issues, please call Flo tech support at 1-888-598-1198.

8.2 Power Up the Unit

Turn on the unit disconnect and wait for the i-Controller screen to display "CES".

8.3 Setting The Digital Phase Monitor (DPM)

Set the DPM to the following values:

- 1. Line Voltage = Set to Flo name plate voltage
- 2. Over/Under % = Set to 10%
- 3. Trip Delay = 5 Seconds
- 4. Restart Delay = 2 Minutes
- 5. Phase Imbalance = 5%

9. Test Unit Functionality

9.1 Set Time and Date

From the Main Menu, press T5, (Network Info).

Press and verify the time is correct. If the correct time is not displayed, set the time.

Use the ____ to navigate to the hour or minute fields.

With a field highlighted, press **ENTER**; the value will begin blinking.

While the highlighted value is blinking, use the and set the value. Press a second time to accept changes.

The controller will automatically reboot after the date and or time has been changed.

9.2 Verify i-Controller Inputs on Visograph

Verify all installed sensors are present and displaying accurate values.

From the **Main Menu**, press and hold down **T7**. While holding **T7** down, depress **T1**. This key combination unlocks the **Field Technician Options** screen.

Press **T6** to navigate to the IO Status screen. Press **T1** to access the **Input Status** screen. Press **T1** to view additional pages.

9.3 Calibrate Sensors

From the **Main Menu**, press and hold down **T7**. While holding **T7** down, depress **T1** (**Sensor Offsets**).

Press to view additional pages.

Enter the offset(s) as necessary. Do not exceed \pm 3°F for a temperature sensor, \pm 2°F for a dewpoint sensor or \pm 3% for a humidity sensor.

9.4 Verify i-Controller Outputs

From the **Main Menu**, press and hold down **T7**. While holding **T7** down, depress **T1**. This key combination unlocks the **Field Technician Options** screen.

Press **T6** to navigate to the IO Status screen. Press **T2** to access the **Output Status** screen. Press **T2** to view additional pages.



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

9.5 Dehumidification Test Mode

From the Main Menu, press and hold down **T7**, while holding **T7** down, depress **T1** (**Field Technician Options**).

From the Field Technician Options screen, press **T2** (**Test Modes**). Press **T3** (**2. Operational Tests**).

Use to navigate to the **Dehumidification Test**Mode Off and press ENTER.

When the "OFF" value begins blinking, press the to change the value to "ON", then press ENTER.

Wait for **10-minutes**, then terminate Dehumidification. *Terminate Dehumidification Test Mode* (*OFF*)

From the Field Technician Options screen, press **T2** (**Test Modes**). Press **T3** (**2. Operational Tests**).

Use to navigate to the **Dehumidification Test**Mode "ON", then press ENTER.

When the "**ON**" value begins blinking, press to change the value to "**OFF**", then press **ENTER**.

Dehumidification mode is now turned "OFF".

9.6 Heating Test Mode

From the Field Technician Options screen, press **T2** (**Test Modes**). Press **T3** (**2. Operational Tests**).

Use ____ to navigate to the **Heat Test Mode Off** and press ____.

When the "OFF" value begins blinking, press the to change the value to "ON" and press ENTER.

Wait for **10-minutes**, then terminate Heating.

Terminate *Heating* Mode (**OFF**)

From the Field Technician Options screen, press **T2** (**Test Modes**). Press **T3** (**2. Operational Tests**).

Use and to navigate to the **Heating Test**Mode On and press

When the "ON" value begins blinking, press the change the value to "OFF", then press ENTER.

Heating mode is now turned "OFF".

	(A)	(B)	(C)	(D)	(E)	(F)	(G)	(H)	(1)
MODES OF OPERATION	SUPPLY FAN	COMP(S)	COND FAN(S)	RECLAIM	HEATING	OUTDOOR AIR DAMPER	RETURN AIR DAMPER	BYPASS AIR DAMPER	INDICATE PASS or FAIL
DEHUM	ON	ON	ON	N/A	OFF	OPEN*	OPEN**	OPEN	
HEATING	ON	OFF	OFF	N/A	ON	OPEN*	OPEN	OPEN**	

^{*} Damper will be in the OPEN position (typically 20 - 30% - OPEN 0.5" - 1.50").

Table 6: Test mode unit status

^{**} This damper will be OPEN to its minimum position.



IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

10. BMS Connectivity

The BACnet network connection needs to be established.

By default, the i-Controller BACnet Baud Rate is set to 19.2Kb/s. The MAC address and device number is set to 51. To adjust the address from the Visograph, perform the following steps:

From the **Main Menu**, press **T5**, (**Network Info**). Then, press the **Options** button.

Using the ____ to navigate to the value that you wish to change.

With a field highlighted, press the value will begin blinking.

While the highlighted value is blinking, use the , set the value. Press a second time to accept changes.

Once the BACnet address is changed, the controller must be rebooted. Use the determined buttons to navigate to the controller reboot option.

Navigate to "Reboot Controller?" and set the value to "YES". The controller will reboot.

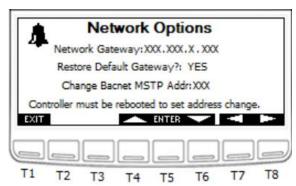


Figure 7. i-Controller Network Information Screen and pin connections

Verify that BACnet is communicating. If it is not communicating, contact the BMS supplier for additional troubleshooting steps.




IN-IC1-15

Title:

Jace to i-Controller REV.200 MPU (575V 40-70 Ton) Conversion

11. Appendix:

11.1. i-Controller Layout

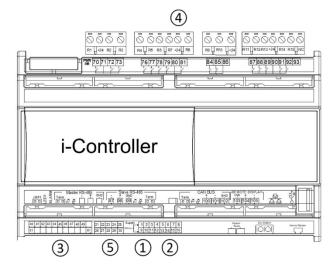

- 1. 24VAC Power (Point 9 and 1)
- 2. Analog Inputs
- 3. Digital Inputs
- 4. Digital Outputs
- 5. Analog Outputs

11.2. Expansion Board Layout



- 1. Expansion 24VAC Power (Point 9 and 1)
- 2. Expansion Analog Inputs
- 3. Expansion Digital Outputs